

PANE

GLASS CLEANER

- * Ready To Use
- * Penetrating Foam Helps Lift Out Soil
- * Leaves Surface Clean, Bright and Crystal Clear

Efficient economical, non-ammoniated high foaming glass cleaner. Contains oil-cutting detergents, solvents and degreasers. The heavy-bodied foam clings to the surface and easily cleans away a multitude of dirt, grime, greases, films, smears, and bugs. Contains no oils, waxes or silicones--leaves no dirt-attracting streaky film or residue. Produces a truly clean surface that stays clean longer.

Ideal for use on:

Windows	CRT Screens	Appliances
Mirrors	TV Screens	Bathtubs
Windshields	Showcases	Sinks
Sneeze Guards	Chandeliers	Tile

and most other hard, nonporous surfaces, such as metal, plastic, rubber, leather and porcelain. Will not harm Plexiglas (registered trademark of Rohm & Haas Company) or similar plastics.

DIRECTIONS FOR USE:

SHAKE WELL BEFORE USING. Remove protective cap. Hold container upright about 6 inches (1/6 m) from the object or surface to be cleaned and spray on sparingly. Wipe immediately with clean, lint-free cloth or paper towel, removing excess cleaner. Polish with second clean, dry, lint-free cloth or paper towel.

COMPOSITIONAL INFORMATION

Contains: Water (CAS# 7732-18-5): Ethyl Alcohol (CAS# 64-17-5): 2-Butoxyethanol (CAS# 111-76-2): Butane (CAS# 106-97-8): Propane (CAS# 74-96-6).

PRECAUTIONS

CAUTION: Avoid eye contact and prolonged skin contact. If in eyes, flush with plenty of water. Remove any contact lenses, then hold eyelids open and continue flushing thoroughly. **KEEP OUT OF THE REACH OF CHILDREN.**

Do not transport, use, store, or dispose of near flames, sparks, or other sources of heat or ignition. Containers exposed to direct sunlight or source of heat above 120 degrees F (49 C) may burst. Store in a cool, dry area inaccessible to children. Do not puncture or incinerate container. For disposal, refasten protective cap on container and discard in trash.

C-935-A